

R3D Export Setting File

The .r3d file format is a method of storing Inspect3D export settings as XML, ensuring that they are both human- and machine-readable. Inspect3D allows users to save export settings from the  **Export Results** dialog. Previously-saved export settings can also be loaded and used from this dialog.

Format

As an XML document, an .r3d file is made up of hierarchical elements that are demarcated by tags, indicated by the < and > characters. An element consists of a start tag, <elementname>, and end tag, </elementname>, and all of the characters in between. Alternatively, an element can be defined by a single tag, <elementname />.

Tags can also contain attributes in the *name*="value" format, further describing the associated element.

1. The top-level element in an .r3d file is *settings*. It contains an arbitrary (1-n) number of *setting* elements.
2. The second-, and bottom-, level element in an .r3d file is *setting*. A *setting* element has a *name* attribute (the corresponding setting's name) and a *value* attribute (the corresponding setting's value).

DTD

Formally, an .r3d file respects the Document Type Definition (DTD):

```
<!DOCTYPE settings [  
  <!ELEMENT settings (setting+)>  
  <!ATTLIST setting name CDATA #REQUIRED  
    setting value CDATA #REQUIRED  
  >  
>
```

From:
<https://has-motion.com/wiki/> - **Wiki Documentation Site**

Permanent link:
https://has-motion.com/wiki/doku.php?id=other:inspect3d:documentation:files:r3d_export_setting_file

Last update: **2024/12/18 14:40**

