

Proximal_End_Position

Disabling is only used for reporting because the resolution coordinate system cannot be controlled.
See the model based item [Model Based Item: SEG_PROXIMAL_JOINT](#)

From:
<https://has-motion.com/wiki/> - Wiki Documentation Site

Permanent link:
https://has-motion.com/wiki/doku.php?id=visual3d:documentation:kinematics_and_kinetics:proximal_end_position&rev=1721149034

Last update: 2024/07/16 16:57

