

The default location of the config folder can be changed in the **Visual3D Program Options** dialog box.

The config folder should contain three .ini files:

- 1) **custom\_text.ini** - used to define the displayed temporal distance measure names within the report template
- 2) **segment\_names.ini** - used to define displayed segment names ([Default Segment Names](#))
- 3) **V3DEventNames.ini** - used to define displayed event names

1. Open the Visual3D Program Options dialog by going to **Edit → Preferences** from the drop down menu. 

2. Click the “...” button next to **Configuration Folder** and browse to the config folder. 

3. **Close** Visual3D and re-open the program. The location of the default configuration folder location will be saved.

Retrieved from “”

From:  
<https://has-motion.com/wiki/> - Wiki Documentation Site

Permanent link:  
[https://has-motion.com/wiki/doku.php?id=visual3d:documentation:modeling:segments:config\\_folder&rev=1718643978](https://has-motion.com/wiki/doku.php?id=visual3d:documentation:modeling:segments:config_folder&rev=1718643978)

Last update: 2024/06/17 17:06

