


Config_Folder

The default location of the config folder can be changed in the **Visual3D Program Options** dialog box.


The config folder should contain three .ini files:

- 1) **custom_text.ini** - used to define the displayed temporal distance measure names within the report template
- 2) **segment_names.ini** - used to define displayed segment names ([Default Segment Names](#))
- 3) **V3DEventNames.ini** - used to define displayed event names

1. Open the Visual3D Program Options dialog by going to **Edit** → **Preferences** from the drop down menu.

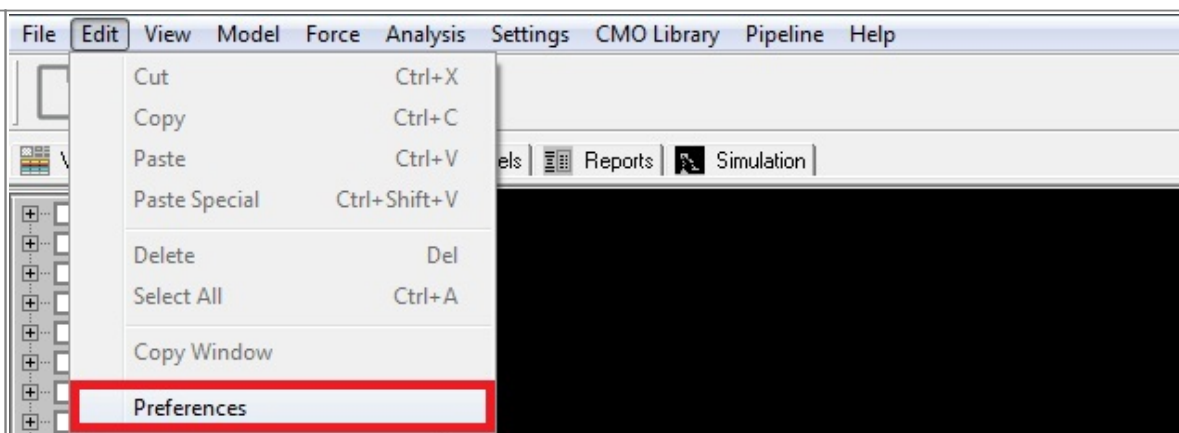

2. Click the "..." button next to **Configuration Folder** and browse to the config folder.

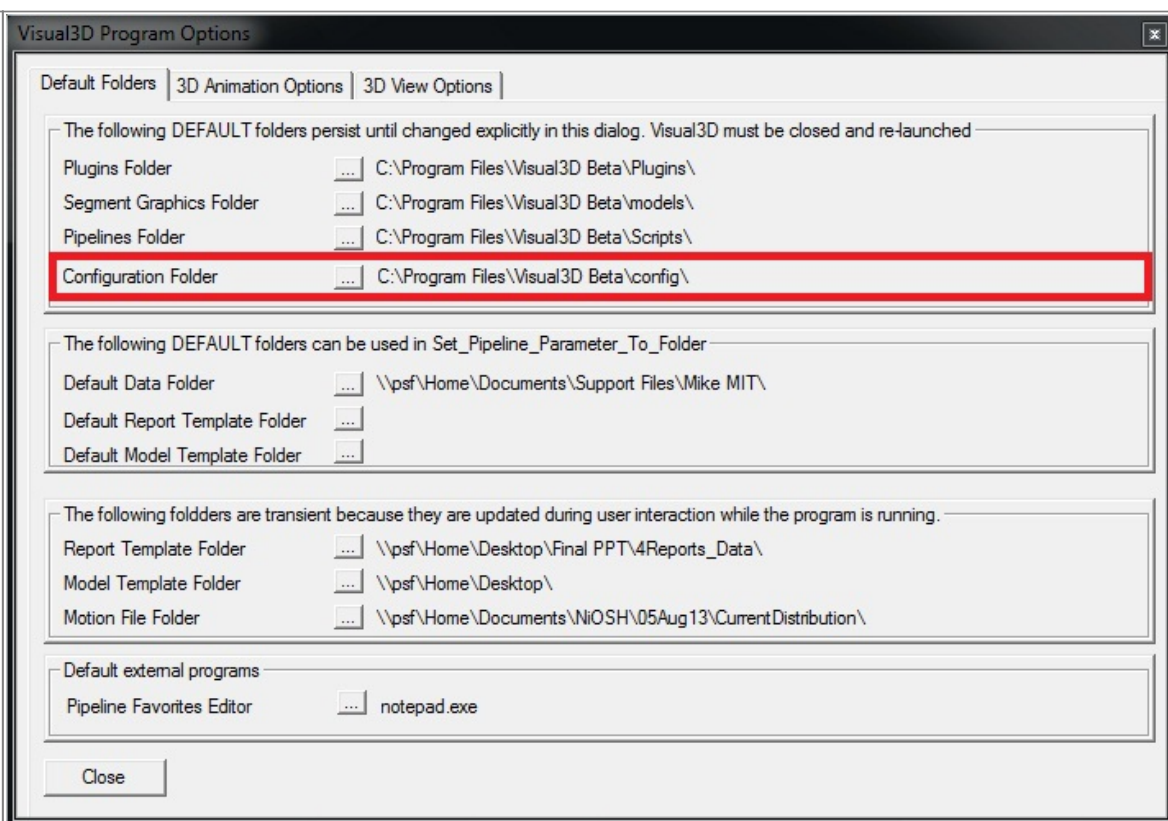

3. **Close** Visual3D and re-open the program. The location of the default configuration folder location will be saved.

From:
<https://has-motion.com/wiki/> - Wiki Documentation Site

Permanent link:
https://has-motion.com/wiki/doku.php?id=visual3d:documentation:modeling:segments:config_folder&rev=1721229038

Last update: **2024/07/17 15:10**

