

Set Force Platform Threshold

This command is used to set a Force Threshold. Any force platform signal below this threshold will be set to zero. This can be used to account for noise or small variations in force.

Pipeline Command

The pipeline command for **Set Force Platform Threshold** can be found in the Pipeline Workshop within the **Force** folder as so:

```
Set_Force_Platform_Threshold
! /THRESHOLD=
! /SET_AS_DEFAULT=FALSE
;
```

Command Parameters

The following table shows the command parameters seen above and their descriptions:

Threshold	The minimum value under which signals will be set to 0
Set As Default	True or False: Make this value the default value

Example: Set Minimum Threshold to 50N

```
Set_Force_Platform_Threshold
/THRESHOLD=50
! /CALTESTER_THRESHOLD=
/SET_AS_DEFAULT=TRUE
;
```

Notes

This value may also be set manually by going to **Force** → **Modify Minimum Force Platform Value**

If using this command in a pipeline script, do not forget to use the **RECALC** command (listed under **File Management** category in the pipeline workspace) to update force/kinetic signals.

From:
<https://wiki.has-motion.com/> - Wiki Documentation Site

Permanent link:
https://wiki.has-motion.com/doku.php?id=visual3d:documentation:pipeline:force_commands:set_force_platform_threshold

Last update: 2026/01/08 18:38

