

set a force threshold. any force platform signal below this threshold will be set to zero.

```
set_force_platform_threshold  
! /threshold=20  
! /set_as_default=false  
;
```

this value may also be set manually by going to **force** → **modify minimum force platform value**

if using this command in a pipeline script, do not forget to use the [recalc](#) command (listed under [file management](#) category in the pipeline workspace) to update force/kinetic signals.

From:

<https://has-motion.com/wiki/> - Wiki Documentation Site

Permanent link:

https://has-motion.com/wiki/doku.php?id=visual3d:documentation:pipeline:force_commands:set_force_platform_threshold&rev=1718804251

Last update: 2024/06/19 13:37

