

Set_Force_Platform_Threshold

Set a Force Threshold. Any force platform signal below this threshold will be set to zero.

```
Set_Force_Platform_Threshold  
! /THRESHOLD=20  
! /SET_AS_DEFAULT=FALSE  
;
```

This value may also be set manually by going to **Force** → **Modify Minimum Force Platform Value**

If using this command in a pipeline script, do not forget to use the **RECALC** command (listed under **File Management** category in the pipeline workspace) to update force/kinetic signals.

From:
<https://has-motion.com/wiki/> - Wiki Documentation Site

Permanent link:
https://has-motion.com/wiki/doku.php?id=visual3d:documentation:pipeline:force_commands:set_force_platform_threshold&rev=1720790995

Last update: 2024/07/12 13:29

