

## Command Parameters

# Modify\_All\_Graphs

## PAGE\_NO

This command was implemented in Visual3D v5.02.25.

If the PAGE\_NO parameter is blank, the command will run on all pages.

**Command** is set to **2+3+4**, only pages 2, 3 & 4 will be modified.

```
\\ Modify_All_Graphs\\ ! /PAGE_NO=\\ ! /Y_MODIFY_RANGE=TRUE\\ !
Modify_Range\\ ! /Y_MIN_BUFFER=\\ ! /Y_MAX_BUFFER=\\ ! /Y_MIN=\\
! /Y_MAX=\\ ! /Y_SCALE_INCREMENT=\\ ! /Y_AXIS_LABEL=\\ ! /X_AXIS_LABEL=\\
;\\
Y_MODIFY_RANGE
```

If this parameter is set to FALSE, the range will not be modified, regardless of the specified parameters.

When this parameter is set to TRUE, the other parameters to modify the Y range may be used.

**Modify Range Parameters:** (click to expand)

## Y\_USE\_AUTO\_RANGE

If this parameter is set to TRUE, the range will automatically be set using the signal max/min values.

This parameter can be used with the Y\_SCALE\_INCREMENT parameter.

When **Y\_USE\_AUTO\_RANGE** is set to **FALSE**, you can use either **Y\_MIN\_BUFFER&Y\_MAX\_BUFFER** OR **Y\_MIN&Y\_MAX**.

## Y\_MIN\_BUFFER&Y\_MAX\_BUFFER

The auto range parameter will set the graph max/min to be the signal max/min. However, if you want the graph max/min to be +/- some value above the signal max/min, use the buffer values.

For example, if you want the graph max to be 10 units greater than the signal max and the graph min to be 15 units less than the signal min, you would:

```
...
/Y_MODIFY_RANGE=TRUE
/Y_USE_AUTO_RANGE=FALSE
/Y_MIN_BUFFER= 15
/Y_MAX_BUFFER= 10
! /Y_MIN=
! /Y_MAX=
...
```

**NOTE:** The min buffer does not use a negative sign.

This parameter can be used with the Y\_SCALE\_INCREMENT parameter.

## Y\_MIN&Y\_MAX

You can explicitly set the graph max/min.

If you want to explicitly specify the graph max/min (max 25, min -25), you would:

```
...  
/Y_MODIFY_RANGE=TRUE  
/Y_USE_AUTO_RANGE=FALSE  
! /Y_MIN_BUFFER=  
! /Y_MAX_BUFFER=  
/Y_MIN= 25  
/Y_MAX= -25  
...
```

This parameter can be used with the Y\_SCALE\_INCREMENT parameter.

---

## Y\_SCALE\_INCREMENT

This parameter sets the max/min value to the nearest value. Example, if the parameter is set to 1, the graph max/min will be set to the highest whole number. If the parameter is set to 5, the graph max/min will be set to the highest five value.

## Modify Axes Labels

If you set either AXIS\_LABEL equal to REMOVE\_LABEL, the label will be removed.

If the parameter is set to blank (is empty), the label will not be updated.

From:  
<https://has-motion.com/wiki/> - Wiki Documentation Site

Permanent link:  
[https://has-motion.com/wiki/doku.php?id=visual3d:documentation:pipeline:report\\_commands:modify\\_all\\_graphs&rev=1721149207](https://has-motion.com/wiki/doku.php?id=visual3d:documentation:pipeline:report_commands:modify_all_graphs&rev=1721149207)

Last update: 2024/07/16 17:00

