



Rectify a signal. Takes the absolute value of every element of a signal.

Rectify

Rectify /Signal_Types= The type of signal to be processed **/Signal_Names=** The names of the signals to be processed **"/Signal_Folder=** The name of the signal folder ;

Visual3D calculates signal rectification using the following formula:

$$x(t_i) = \text{abs}(x(t_i))$$

From:

<https://has-motion.com/wiki/> - Wiki Documentation Site

Permanent link:

https://has-motion.com/wiki/doku.php?id=visual3d:documentation:pipeline:signal_commands:rectify&rev=1720028636

Last update: **2024/07/03 17:43**

